Yeşilköy Mah. Atatürk Cad. EGS Business Park B3-Blok Kat:5 No.:216 Bakırköy/İstanbul, TÜRKİYE
Tel : +90 212. 465 07 71 - 465 07 72 - 465 07 73
Fax: +90 212. 465 07 70
www.vitolighting.com
info@vitolighting.com

LED CEILING FAN INSTRUCTION

1.SPECIFICATION:

Model:	FANLUX-C3 / 2027740 / 2027750 / 2027760
Operating Voltage	110-240V ~ 50/60Hz
Power	18W LAMP / 35W MOTOR
CCT	3xCCT(3000K / 4500K / 6500K)
Wind Speed	3 speed (Mid/Medium/ Strong Wind)
Timing Function	1H and 2H and 4H Timing
Sudden.stop Protection	YES
Lamp dim.	106mm
Control Mode	Remote Control/all Switch
Applicable Place	Suitable for living room,kitchen, balcony, bar,study,restaurant, shop and other indoor places.

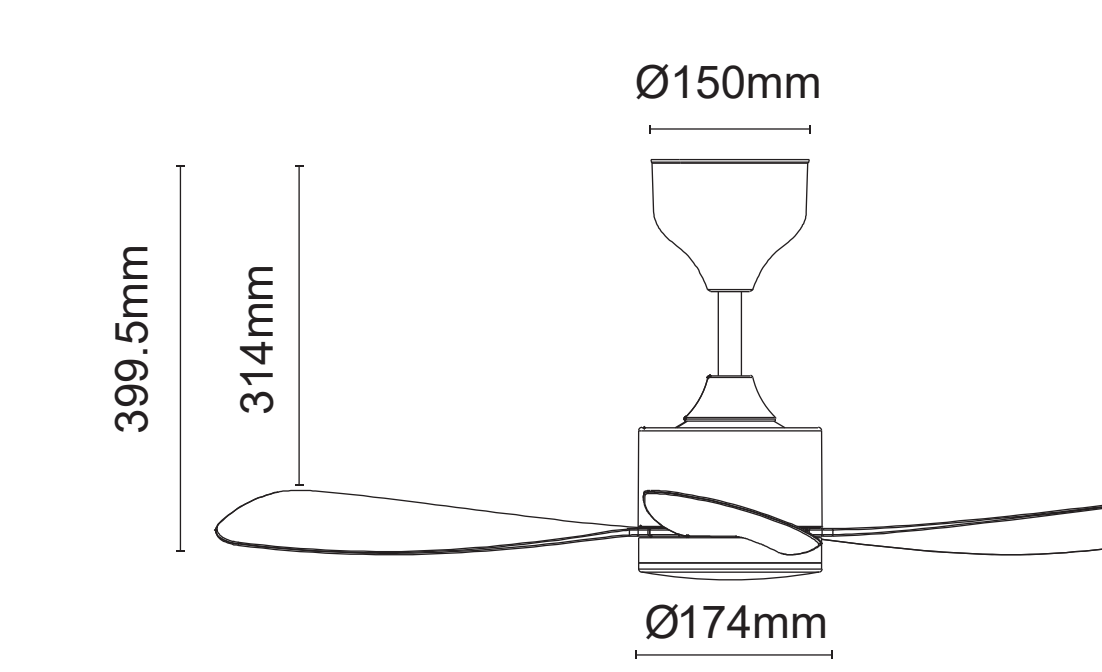

2.PARTS INVENTORY:

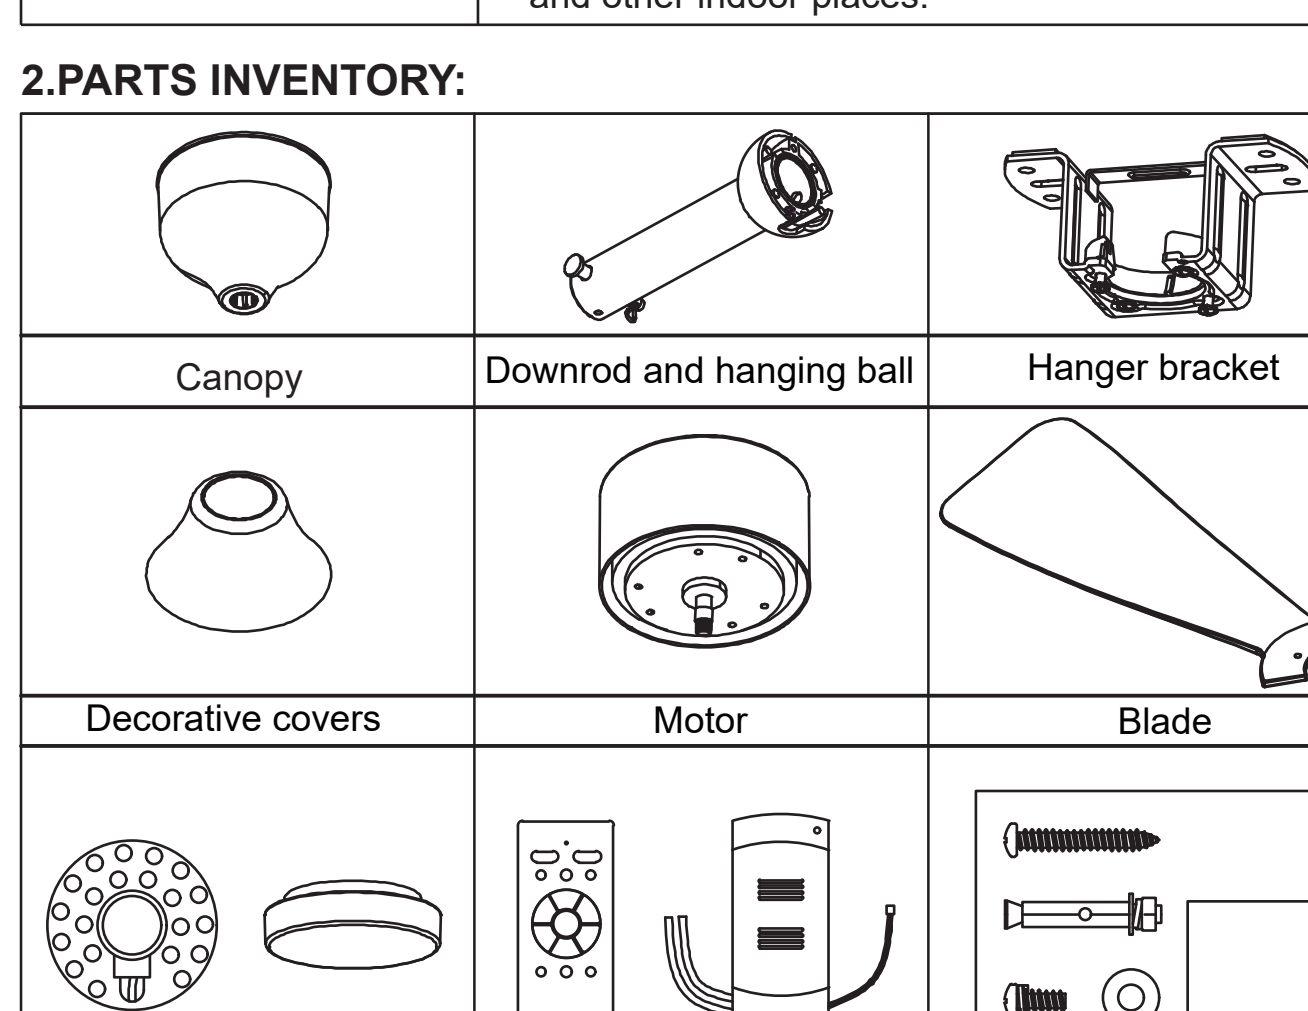

3.INSTALLATION PREPARATION:

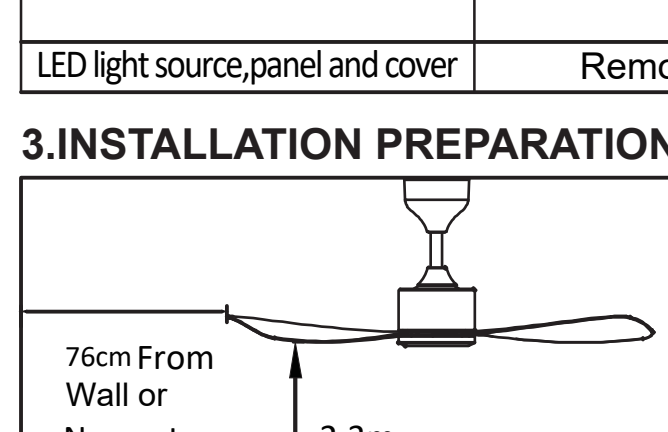

4.PREPARING THE FAN SITE:

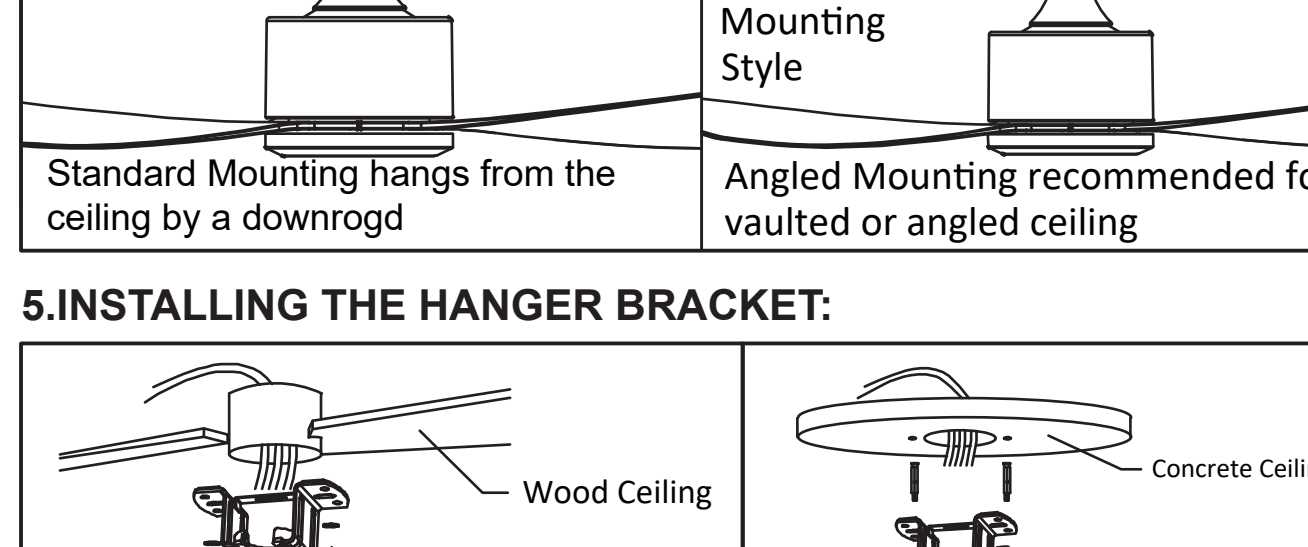

5.INSTALLING THE HANGER BRACKET:

6.ASSEMBLING AND HANGING THE FAN:

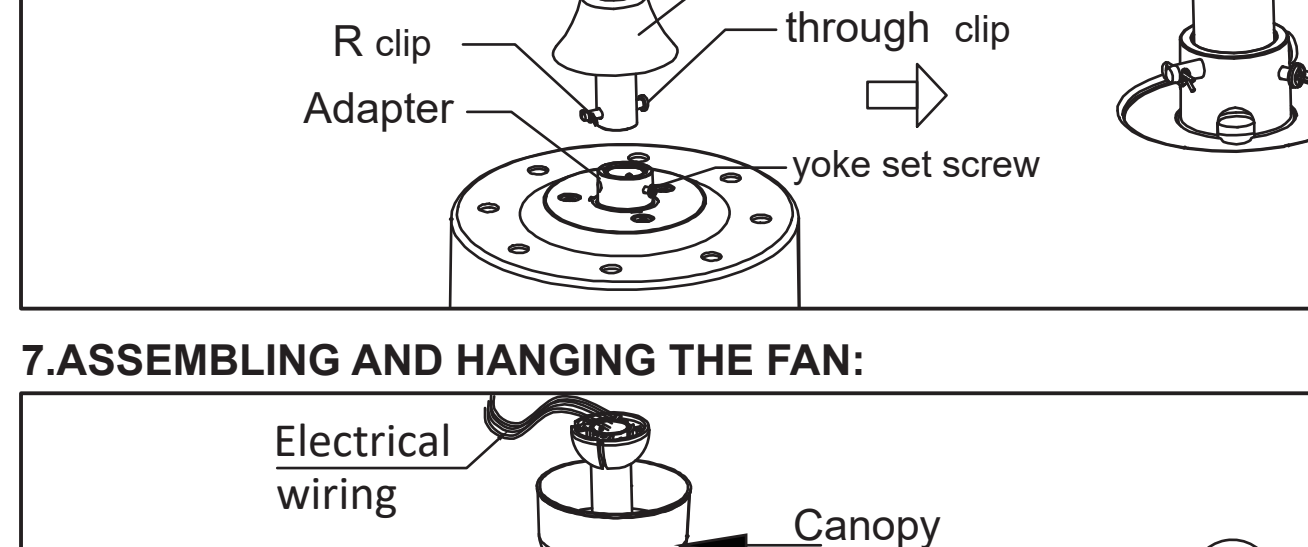

7.ASSEMBLING AND HANGING THE FAN:

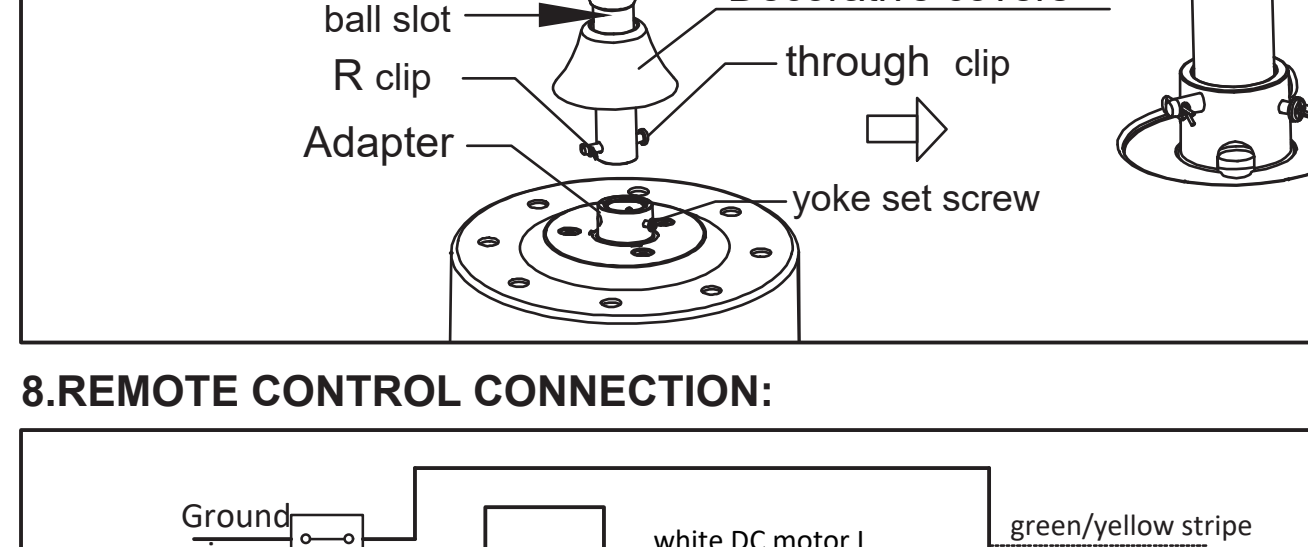

8.REMOTE CONTROL CONNECTION:

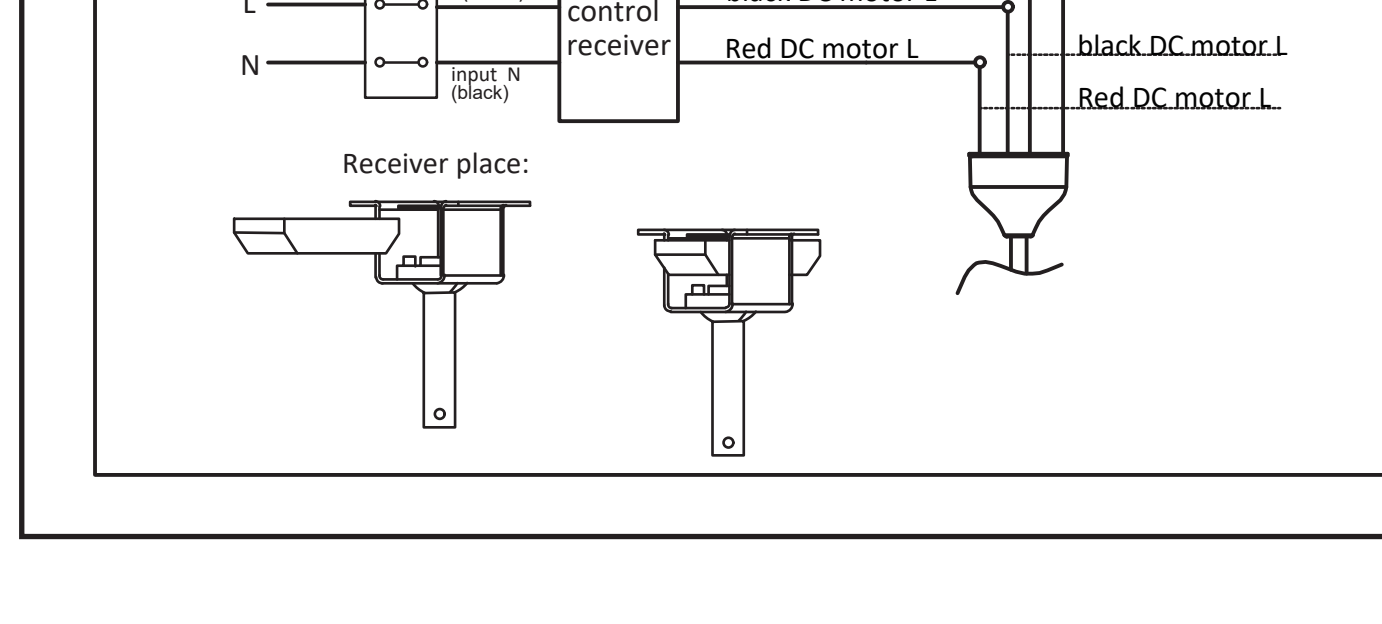

9.CANOPY ASSEMBLY:

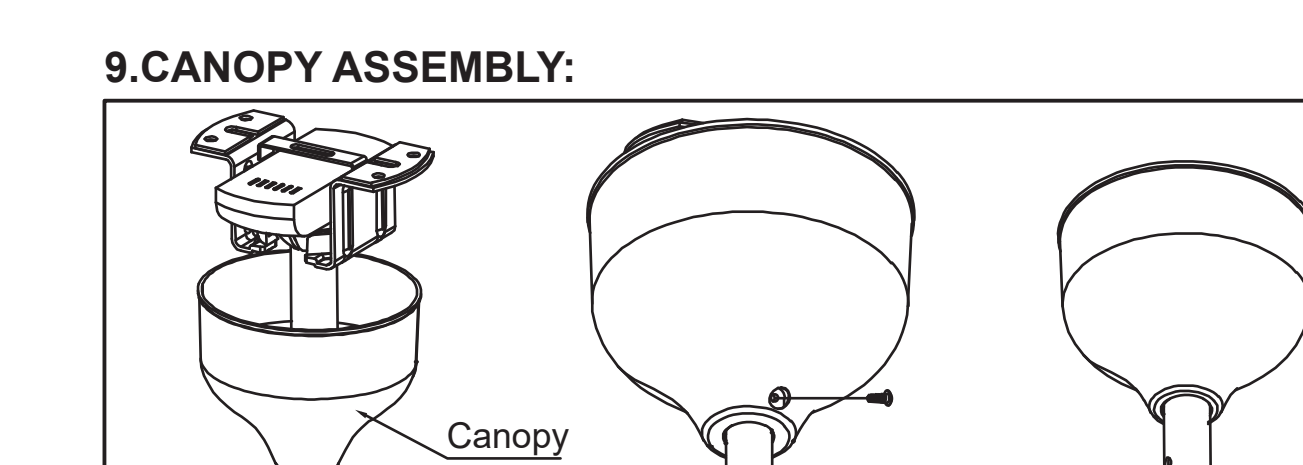

10.BLADE ASSEMBLY:

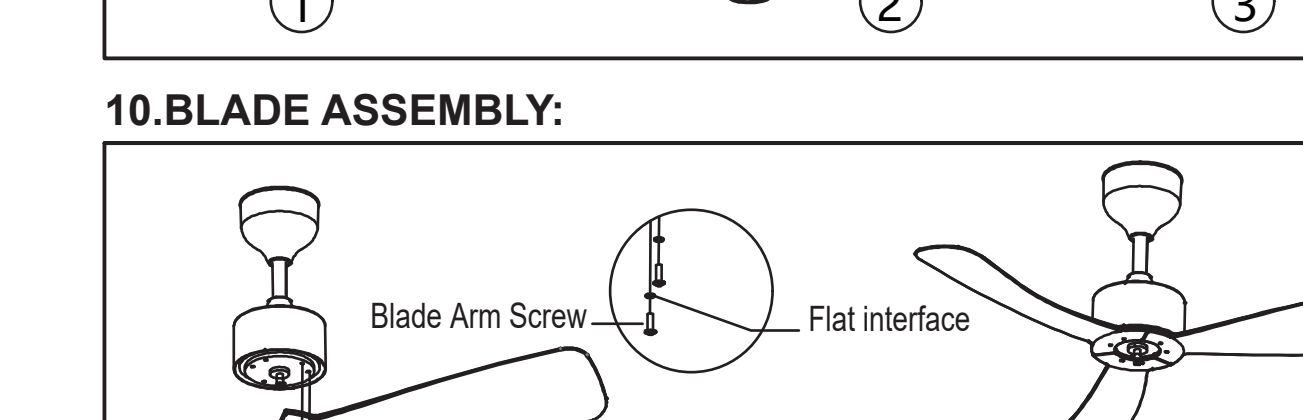

11.LED PAN ASSEMBLY:

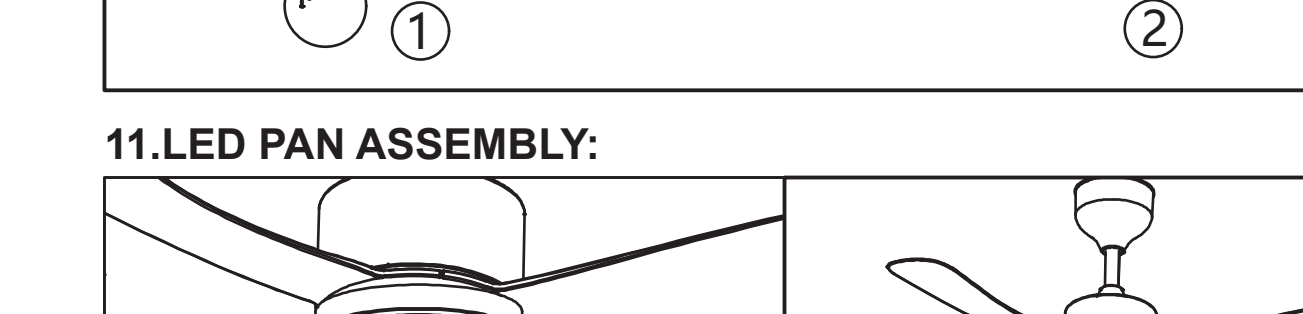

12.LED LAMP CONNECT:

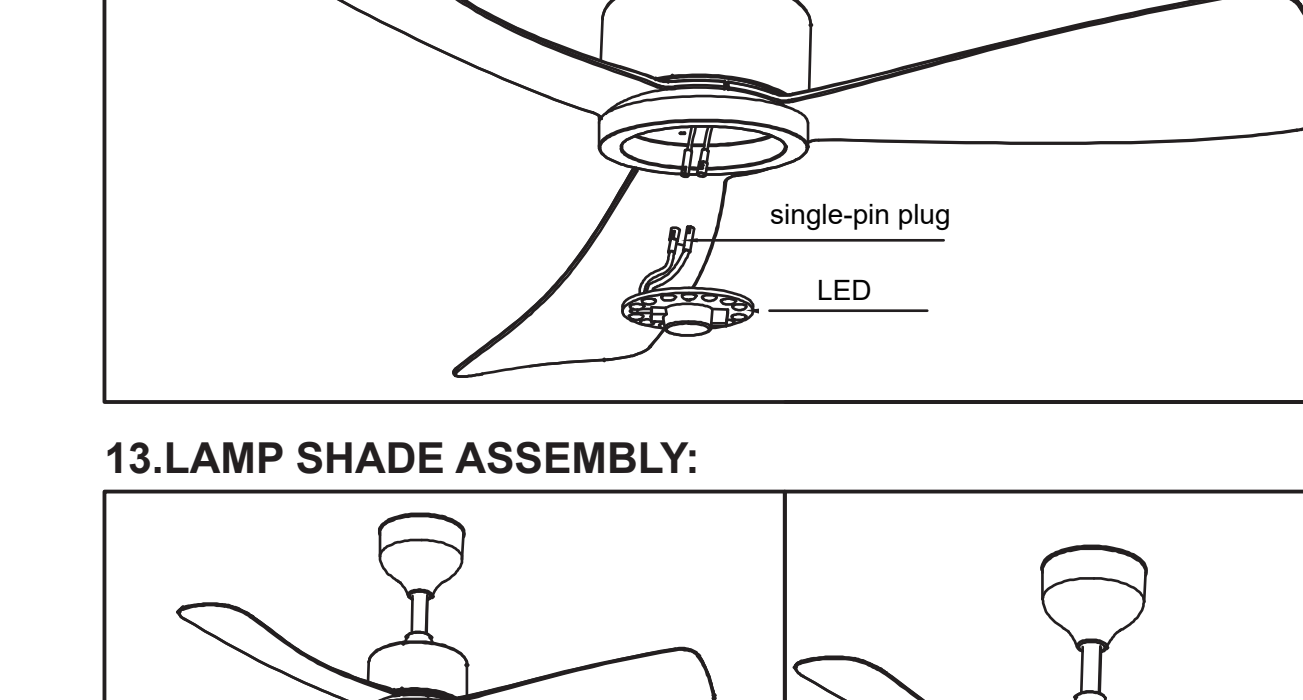

13.LAMP SHADE ASSEMBLY:

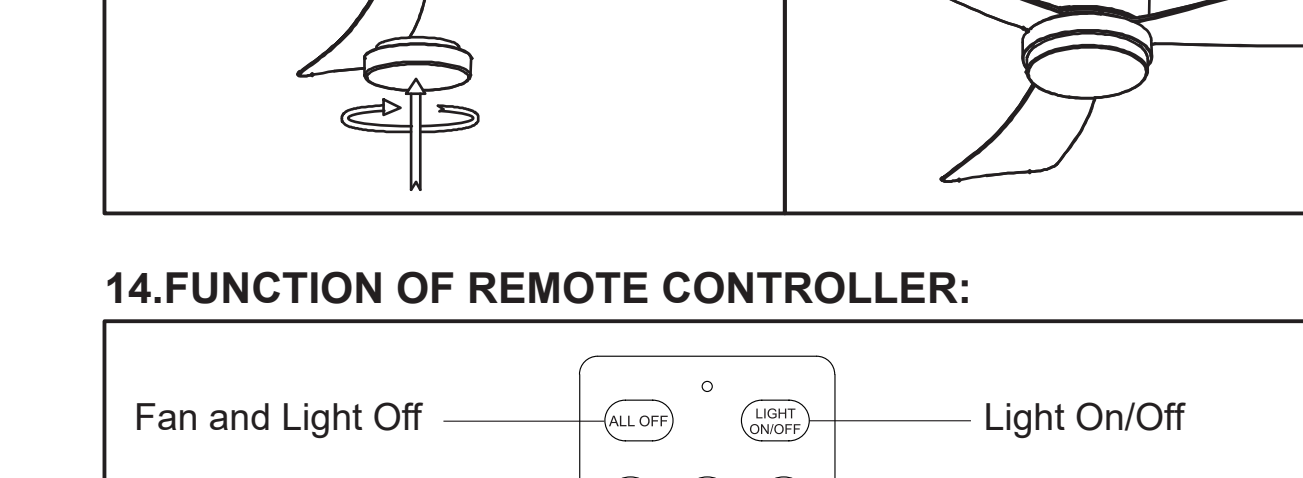

14.FUNCTION OF REMOTE CONTROLLER:

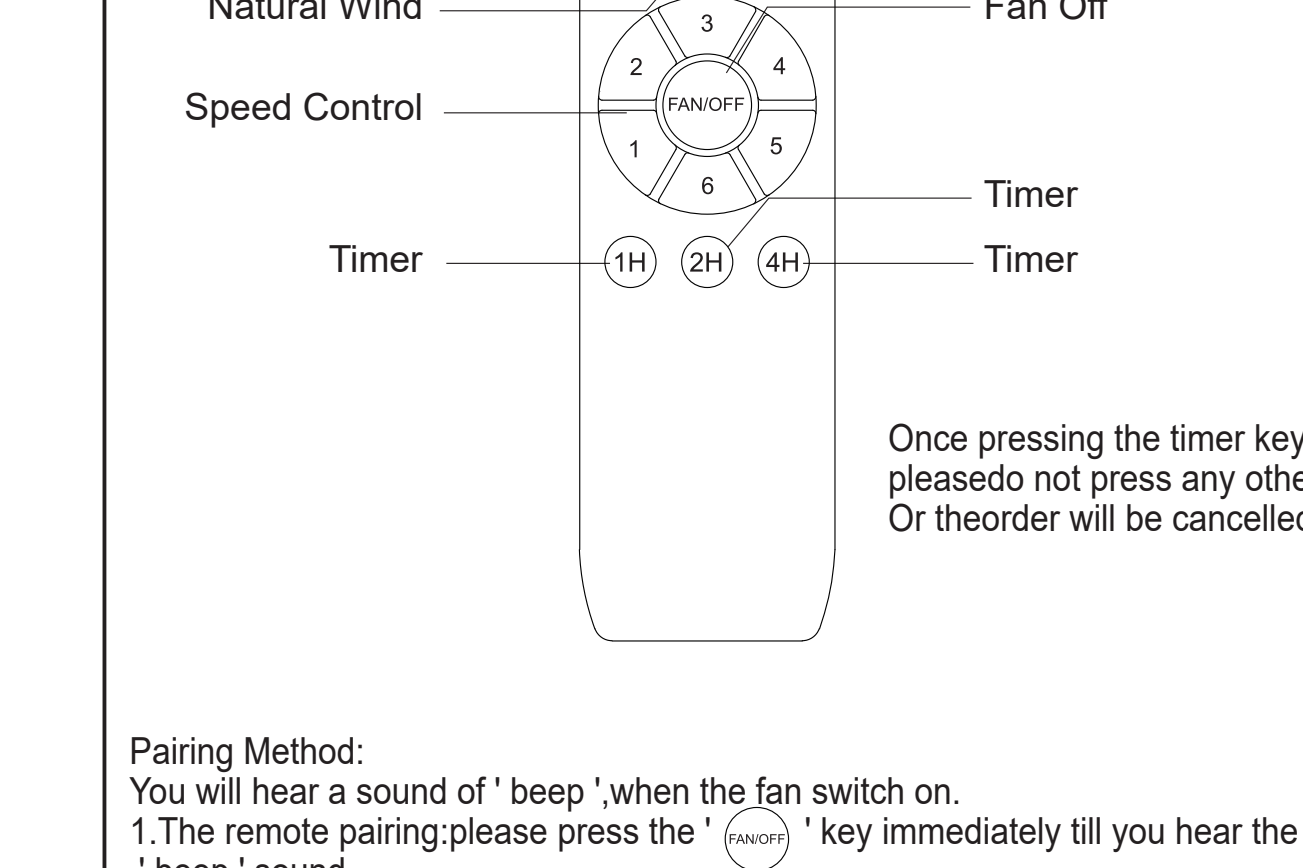

Once pressing the timer key, pleasedo not press any other keys. Or theorder will be cancelled.

Pairing Method:
You will hear a sound of ' beep ',when the fan switch on.
1.The remote pairing:please press the ' FAN/OFF ' key immediately till you hear the long ' beep ' sound.

Notices:
1. When the emitter is unable to remotely control the receiver, please check whether the emitter's batteries are in good contact, whether they are fixed properly and whether they run out of use.
2. When the emitter is unable to remotely control the receiver, please check whether there is other remote control products around the space and check whether the keys are pressed down, because same nature of remote control product may cause interference with each other resulting in poor receiving effect. Taking away such articles will normalize the remote control function. (the infrared remote controller is not included).
3. Please use this product under applicable voltage. Too low voltage will lead to failure of the remote controller to work (Please refer to the product label for the voltage range and related parameters).
4. Please take out the batteries if you will not use this product for a long time.

EN

CAUTIONS AND WARNINGS
• Read this entire manual carefully before beginning the installation.
• To reduce the risk of personal injury, attach the fan directly to the support structure of the building according to these instructions, and use only the hardware supplied.
• To avoid possible electrical shock, before installing your fan, disconnect the power by turning off the circuit breakers to the outlet box and associated wall switch location. If you cannot lock the circuit breakers in the off position, securely fasten a prominent warning device, such as a tag, to the service panel.
• All wiring must be in accordance with electrical standards. If you are unfamiliar with wiring, ask from a qualified electrician.
• To reduce the risk of personal injury, do not bend the blade attachment system when installing, balancing, or cleaning the fan. Never insert foreign objects between rotating fan blades.
• To reduce the risk of fire, electrical shock, or motor damage, do not use a solid-state speed control with this fan. Use only original speed controls.
NOTE: The important safety precautions and instructions appearing in the manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense and caution are necessary factors in the installation and operation of this fan.
INSTALATION
-Parts Inventory : Carefully open the packaging. Remove items from Styrofoam inserts. Remove motor housing and place on a soft surface to avoid damage to finish. Check against parts inventory that all parts have been included.
-Installation Preparation : To prevent personal injury and damage, ensure that the hanging location allows the blades a clearance of 2.3m from the floor and 76cm from any wall or obstruction. Be sure the outlet box is securely attached to the building structure and can support the full weight of the fan.
-Preparing the Fan Site : For Pendant rod Installation, this fan can be mounted with a pendant rod on a normal or vaulted ceiling. The hanging length can be extended by a longer pendant rod.
-Installation Preparation : Installation requires these tools: Screwdriver, flat-head screwdriver, adjustable pliers or wrench, stepladder, wire cutters, and rated electrical tape.
-Installing the Hanger Bracket : Please drill φ8mm hole on the concrete ceiling, and insert the bolt. Align bracket with the hole, then tighten with nut.
-Assembling and Hanging the Fan : If you wish to extend the hanging length of your fan, you must remove the hanging ball from the 6 inch pendant rod provided to use with an extended pendant rod (included) . (If you wish to use the 6 inch pendant rod, please proceed to instructions below.) To remove hanging ball, loose set screw on hanging ball and remove pin and clip. Lower hanging ball and remove stop pin. Slide hanging ball off the original pendant rod A, and slide it down the longer pendant rod B (the top of the pendant rod should be noted as having a set screw hole; use this hole when setting the set screw). Insert stop pin into top of extended pendant rod and raise hanging ball. Be sure stop pin aligns with slots on the inside of the hanging ball, tighten set screw securely. Tip: To prepare for threading electrical wires through pendant rod, apply small piece of electrical tape to the ends of electrical wires-this will keep the wires together when threading them through the pendant rod. Loosen yoke set screws and nut at top of motor housing. Remove pin and clip from pendant rod (if you have not already done so). Slide pendant rod through canopy. Tread electrical wires through pendant rod and pull extra wire slack from the upper end of the pendant rod. Place pendant rod into the motor housing yoke and ew-insert pin and clip that were previously removed. Tighten yoke set screws and nut securely. Lower canopy to motor housing.
-Canopy Assembly : Raise canopy to hanging bracket, aligning loosened screws in hanging bracket with slotted holes in canopy. Twist canopy to lock. Re-insert screws and secured all screws with screwdriver. With hanging bracket secured to the outlet box and able to support to fan, you are now ready to hang your fan. Grab the fan firmly with two hands. Slide pendant rod through opening in hanging bracket and let hanging ball rest on the hanging bracket. Turn the hanging ball slot until it lines up with the hanging bracket tab. Tip: Seek the help of another person to hold the stepladder in place and to lift the fan up to you once you are set on the ladder.
-Blade Assembly : Time Saver: Washers for blade screws can be set on each blade screw prior to installing blades. Align blade holes with motor screw holes, Securing tighten all the screws once all the blades are attached. Before securing screws permanently, repeat with remaining blade arms. Note: Tighten blade screws twice.
-LED Lamp Connect : Insert the lED lamp wire connectors by the same color.
-LED Pan Assembly : Unscrew a set screw. Attach the LED pan up to the bottom of the fan by inserting the other two set screw heads into key hole slots, rotate it to place, then secure the previous set screw by aligning screw hole and the hole at the bottom of the fan, tighten the rest two set screw to secure LED pan. NOTE: While install or remove the LED pan, please keep the insulation pads intact carefully. Turning the set screws over-tightly or fast will damage the insulation pads.
-Lamp Shade Assembly : Restore the cover and the lamp shade back to the LED pan, and secure them with decorative clips and bolt nuts.

BG

ВНИМАНИЕ И ПРЕДУПРЕЖДЕНИЯ
• Прочетете внимателно цялото ръководство, преди да започнете инсталацията.
• За да намалите риска от нараняване, прикрепете вентилатора директно към носещата конструкция на сградата съгласно тези инструкции и използвайте само доставения хардуер.
• За да избегнете възможен токов удар, преди да инсталирате вашия вентилатор, изключете захранването, като изключите прекъсвачите на веригата към изходната кутия и съответното място на стенен превключвател. Ако не можете да заключите прекъсвачите в изключено положение, здраво затегнете забележимо предупредително устройство, като етикет, към сервизния панел.
• Цялото окабеляване трябва да бъде в съответствие с електрическите стандарти. Ако не сте запознати с окабеляването, попитайте квалифициран електротехник.
• За да намалите риска от нараняване, не огъвайте системата за закрепване на лопатките, когато инсталирате, балансирате или почиствате вентилатора. Никога не поставяйте чужди предмети между въртящите се перки на вентилатора.
• За да намалите риска от пожар, токов удар или повреда на двигателя, не използвайте полупроводник за управление на скоростта с този вентилатор. Използвайте само оригинални регулатори на скоростта.
ЗАБЕЛЕЖКА: Важните предпазни мерки и инструкции за безопасност, включени в ръководството, не са предназначени да покрият всички възможни условия и ситуации, които могат да възникнат. Трябва да се разбере, че здравият разум и предпазливостта са необходими фактори при инсталирането и работата на този вентилатор.
ИНСТАЛАЦИЯ
-Опис на части: Внимателно отворете опаковката. Отстранете предметите от вложките от стиропор. Отстранете корпуса на двигателя и го поставете върху мека повърхност, за да избегнете повреда, за да завършите. Проверете в инвентара на частите дали всички части са включени.
- Подготовка за инсталиране: За да предотвратите нараняване и повреда, уверете се, че мястото за окачване позволява на остриетата разстояние от 2,3 м от пода и 76 см от всяка стена или препятствие. Уверете се, че изходната кутия е здраво закрепена към конструкцията на сградата и може да издържи пълното тегло на вентилатора.
-Подготовка на мястото на вентилатора: За монтаж на висящ прът този вентилатор може да се монтира с висящ прът на нормален или сводест таван. Дължината на окачване може да бъде удължена с по-дълъг висящ прът.
- Подготовка за инсталиране: За инсталирането са необходими следните инструменти: отвертка, отвертка с плоска глава, регулируеми клещи или гаечен ключ, стълба, резачки за тел и номинална електрическа лента.
- Инсталиране на скобата за закачалка: Моля, пробийте дупка φ8 mm в бетонния таван и поставете болта. Подравнете скобата с отвора, след това затегнете с гайка.
- Сглобяване и окачване на вентилатора: Ако искате да удължите дължината на окачване на вашия вентилатор, трябва да премахнете висящата топка от 6-инчовия висящ прът, предоставен за използване с удължен висящ прът (включен). (Ако желаете да използвате 6-инчовия висящ прът, моля, продължете към инструкциите по-долу.) За да премахнете висящата топка, разхлабете фиксиращия винт на висящата топка и отстранете щифта и скобата. Спуснете висящата топка и отстранете ограничителния щифт. Плъзнете висящата топка от оригиналния висящ прът A и го плъзнете надолу по по-дългия висящ прът B (трябва да се отбележи, че горната част на висящия прът има отвор за фиксиращ винт; използвайте този отвор, когато настройвате фиксиращия винт). Поставете ограничителния щифт в горната част на удължения висящ прът и повдигнете висящата топка. Уверете се, че ограничителният щифт е подравнен с прорезите от вътрешната страна на висящата топка, затегнете здраво фиксиращия винт. Съвет: За да се подготвите за прокарване на електрически проводници през висящ прът, залепете малко парче електрическа лента към краищата на електрическите проводници - това ще държи проводниците заедно, когато ги прекарвате през висящия прът. Разхлабете закрепващите винтове и гайката в горната част на корпуса на двигателя. Отстранете щифта и скобата от висулката (ако още не сте го направили). Плъзнете висящ прът през сенника. Прокарайте електрическите проводници през висящия прът и издърпайте допълнителната хлабина на проводника от горния край на висящия прът. Поставете висящия прът в скобата на корпуса на двигателя и поставете щифта и скобата, които преди това са били отстранени. Затегнете здраво закрепващите винтове и гайка. Долен капак към корпуса на двигателя.
- Сглобяване на сенника: Повдигнете сенника до скобата за окачване, подравнявайки разхлабените винтове в скобата за окачване с отворите в сенника. Завъртете сенника, за да го заключите. Поставете отново винтовете и закрепете всички винтове с отвертка. С висяща скоба, закрепена към изходната кутия и способна да поддържа вентилатора, вече сте готови да окачите своя вентилатор. Хванете вентилатора здраво с две ръце. Плъзнете висящия прът през отвора в скобата за окачване и оставете висящата топка да лежи върху скобата за окачване. Завъртете слота за висяща топка, докато се изравни с езичето на висящата скоба. Съвет: Потърсете помощта на друг човек, който да задържи стълбата на място и да повдигне вентилатора до вас, след като сте поставени на стълбата.
- Сглобяване на острието: Спестяване на време: Шайби за винтовете на острието могат да бъдат поставени на всеки винт на острието преди монтиране на остриета. Подравнете отворите на ножовете с отворите за винтовете на двигателя, затегнете всички винтове, след като всички ножове са прикрепени. Преди да закрепите винтовете за постоянно, повторете с останалите рамена на острието. Забележка: Затегнете два пъти винтовете на острието.
-Свързване на LED лампа: Поставете съединителите на кабела на LED лампата със същия цвят.
[illegible]

RU

ПРЕДОСТЕРЕЖЕНИЯ И ПРЕДУПРЕЖДЕНИЯ
• ВНИМАТЕЛЬНО ПРОЧИТАЙТЕ ЭТО РУКОВОДСТВО ПЕРЕД НАЧАЛОМ. УСТАНОВКА. СОХРАНИТЕ ЭТУ ИНСТРУКЦИЮ.
[illegible]

RO

ATENȚIE ȘI AVERTIZĂRI
• CITIȚI CU ATENȚIE ACEST MANUAL ÎNAINTE DE A ÎNCEPE INSTALARE. PĂSTRAȚI ACESTE INSTRUCȚIUNI.
[illegible]

TR

DİKKAT VE UYARILAR
• KURULUMA BAŞLAMADAN ÖNCE BU KILAVUZUN TAMAMINI DİKKATLİCE OKUYUN. BU TALİMATLARI SAKLAYIN.
[illegible]

GR

ΠΡΟΣΟΧΗ ΚΑΙ ΠΡΟΕΙΔΟΠΟΙΗΣΕΙΣ
• ΔΙΑΒΑΣΤΕ ΟΛΟΚΛΗΡΟ ΑΥΤΟ ΤΟ ΕΓΧΕΙΡΙΔΙΟ ΠΡΟΣΕΚΤΙΚΑ ΠΡΙΝ ΞΕΚΙΝΗΣΕΤΕ ΕΓΚΑΤΑΣΤΑΣΗ. ΑΠΟΘΗΚΕΥΣΤΕ ΑΥΤΕΣ ΤΙΣ ΟΔΗΓΙΕΣ.
[illegible]

HR

OPREZ I UPOZORENJA
• PAŽLJIVO PROČITAJTE CIJELI OVAJ PRIRUČNIK PRIJE POČETKA MONTAŽE. SAČUVAJTE OVE UPUTE.
[illegible]

IT

PRECAUZIONI E AVVERTENZE
• LEGGERE ATTENTAMENTE TUTTO IL MANUALE PRIMA DI INIZIARE INSTALLAZIONE. CONSERVA QUESTE ISTRUZIONI.
[illegible]

PT

CUIDADOS E AVISOS
• LEIA ESTE MANUAL INTEIRO COM ATENÇÃO ANTES DE COMEÇAR INSTALAÇÃO. GUARDE ESTAS INSTRUÇÕES.
[illegible]

AL

KUJDES DHE PARALAJMËRIME
• LEXO TË GJITHË KËTË MANUAL ME KUJDES PARA TË FILLONI INSTALIMI. RUAJNI KËTO UDHËZIME.
[illegible]

UA

ЗАСТЕРЕЖЕННЯ ТА ПОПЕРЕДЖЕННЯ
• УВАЖНО ПРОЧИТАЙТЕ ЦЕЙ ПОСІБНИК ПЕРЕД ПОЧАТКОМ ВСТАНОВЛЕННЯ. ЗБЕРЕЖІТЬ ЦІ ІНСТРУКЦІЇ.
[illegible]

KZ

ЕСКЕРТУ ЖӘНЕ ЕСКЕРТУ
• БАСТАМАС БҰРЫН ОСЫ НҰСҚАУЛЫҚТЫ МҰҚИЯТ ОҚЫҢЫЗ ОРНАТУ. ОСЫ НҰСҚАУЛЫҚТАРДЫ САҚТАҢЫЗ.
[illegible]

DE

VORSICHTSMASSNAHMEN UND WARNUNGEN
• LESEN SIE DAS GESAMTE HANDBUCH SORGFÄLTIG DURCH, BEVOR SIE BEGINNEN INSTALLATION. BEWAHREN SIE DIESE ANWEISUNGEN AUF.
[illegible]

SK

UPOZORNENIA A VAROVANIA
• PRED ZAČIATKOM SI POZORNE PREČÍTAJTE CELÝ TENTO NÁVOD INŠTALÁCIA. USCHOVAJTE TIETO POKYNY.
[illegible]

MK

ВНИМАНИЕ И ПРЕДУПРЕДУВАЊА
• ВНИМАТЕЛНО ПРОЧИТАЈТЕ ГО ЦЕЛИОТ ПРИРАЧНИК ПРЕД ДА ПОЧНЕТЕ ИНСТАЛАЦИЈА. ЗАЧУВАЈТЕ ГИ ОВИЕ УПАТСТВА.
[illegible]

AR

[illegible]

SL

POZOR IN OPOZORILA
• PRED ZAČETKOM POZORNO PREBERITE TA CELOTEN PRIROČNIK NAMESTITEV. SHRANITE TA NAVODILA.
[illegible]

PL

PRZESTROGI I OSTRZEŻENIA
• PRZECZYTAJ DOKŁADNIE CAŁĄ INSTRUKCJĘ PRZED ROZPOCZĘCIEM INSTALACJA. ZACHOWAJ TE INSTRUKCJE.
[illegible]

CZ

UPOZORNĚNÍ A VAROVÁNÍ
• NEŽ ZAČNETE, PŘEČTĚTE SI POZORNĚ CELÝ TENTO NÁVOD INSTALACE. USCHOVEJTE TYTO POKYNY.
[illegible]

SR

ОПРЕЗ И УПОЗОРЕЊА
• ПАЖЉИВО ПРОЧИТАЈТЕ ЦЕО ОВАЈ ПРИРУЧНИК ПРЕ ПОЧЕТКА ИНСТАЛАЦИЈЕ. САЧУВАЈТЕ ОВА УПУТСТВА.
[illegible]

FR

PRÉCAUTIONS ET AVERTISSEMENTS
• LISEZ ATTENTIVEMENT CE MANUEL EN ENTIER AVANT DE COMMENCER INSTALLATION. CONSERVEZ CES INSTRUCTIONS.
[illegible]

ES

PRECAUCIONES Y ADVERTENCIAS
• LEA DETENIDAMENTE ESTE MANUAL COMPLETO ANTES DE COMENZAR INSTALACIÓN. GUARDE ESTAS INSTRUCCIONES.
[illegible]

BIH

OPREZ I UPOZORENJA
• PAŽLJIVO PROČITAJTE OVAJ CIJELI PRIRUČNIK PRIJE POČETKA INSTALACIJA. SAČUVAJTE OVA UPUTSTVA.
[illegible]

-20°C< ta < +45°C

BG ПРОИЗВЕДЕНО В КИТАЙ
ПРОИЗВОДИТЕЛ : PANLIGHT INTERNATIONAL LIGHTING CO.,LIMITED
10F, 271 HUSHUNAN ROAD, HANGZHOU, CHINA
ВНОСИТЕЛ : ВИТО ЕВРОПА ООД
АДРЕС : Гр.София ул.Източна Тангента 102 ет.4
ТЕЛЕФОН : +359 2 434 15 74
ДАТА НА ПРОИЗВОДСТВО (МЕСЕЦ/ГОДИНА) : 04/25

TR ÇİN'DE ÜRETİLMİŞTİR
İMALATÇI : PANLIGHT INTERNATIONAL LIGHTING CO.,LIMITED
10F, 271 HUSHUNAN ROAD, HANGZHOU, CHINA
İTHALATÇI : RAINAS ELEKTRİK VE AYDINLATMA MALZ.İMAL. VE SAN.TİC.LTD.ŞTİ.
ADRES : YEŞİLKÖY MAH. ATATÜRK CAD. EGS BUSINESS PARK BLOKLARI
NO:12 B1 8.KAT NO.299-300 BAKIRKÖY/İSTANBUL
TELEFON:0212 886 3520
ÜRETİM TARİHİ (AY/YIL): 04/25

KAZ СДЕЛАНО В КИТАЕ
ПРОИЗВОДИТЕЛЬ : PANLIGHT INTERNATIONAL LIGHTING CO.,LIMITED
10F, 271 HUSHUNAN ROAD, HANGZHOU, CHINA
Юридический адрес: 050000, Республика Казахстан, Алатауский район, г.Алматы, Микрайон Теректи, Айналмалы, дом № 69А, корпус Литер В1
Телефон : 87071233838
ДАТА ПРОИЗВОДСТВА (МЕСЯЦ/ГОД):04/25

AR صنع في الصين
الصانع : PANLIGHT INTERNATIONAL LIGHTING CO.,LIMITED
10F, 271 HUSHUNAN ROAD, HANGZHOU, CHINA
المستورد: VITO COMPANY FOR GENERAL TRADING AND COMMERCIAL AGENCIES LTD.
ADDRESS: OPPOSITE TO KESNEZAN OPVI ERBIL/ IRAQ
TELEPHONE: 00964 750 7647647
تاريخ الصنع (الشهر / السنة): 04/25

P.S : IF THE IMPORTER IS NOT LISTED HERE PLEASE CONTACT TO THE LOCAL DISTRIBUTOR OF THIS PRODUCT.